

# Full Dome Mirror

**PLASTICADE®**

www.plasticade.com

## Installation and Cleaning Instructions


**Determine which type of installation is best suited for your requirements**

- 1) Screw Mount - this installation requires an electric drill, drill bits, and mounting screws (not included)
- 2) Pendulum Mount - mounted from chain with S hooks (chain and S-hooks included)

### 1) Screw Mount

- A. Determine position of dome mirror on ceiling.
- B. Position dome where it is to be installed. Using the predrilled holes in the mirror, mark the locations where screws will attach the dome to the ceiling.
- C. Using a drill bit slightly smaller than the screws to be used, drill pilot holes in ceiling.
- D. Use screws to fasten dome to the ceiling.


**CAUTION - Don't screw in screws too tightly or breaking or cracking of the flange may result**

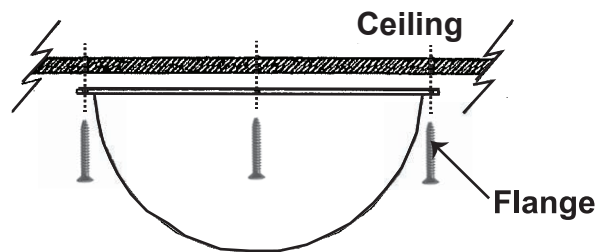

### 2) Pendulum Mount

- A. Install 3 S-hooks (provided) through the 3 pre-drilled holes in dome flange.\*
- B. Attach the 3 short sections of the chain assembly (provided) to the S-hooks.\*\*
- C. Locate area to hang the dome mirror and screw a screw hook (not provided) into the ceiling.
- D. Cut the long section of chain if necessary and then attach to the screw hook in ceiling.

**NOTE:** \*48" domes have 4 predrilled holes  
\*\*48" domes have 4 short sections of chain and 4 S-hooks. A 5th S-hook is provided to attach the 4 short chains to the long chain

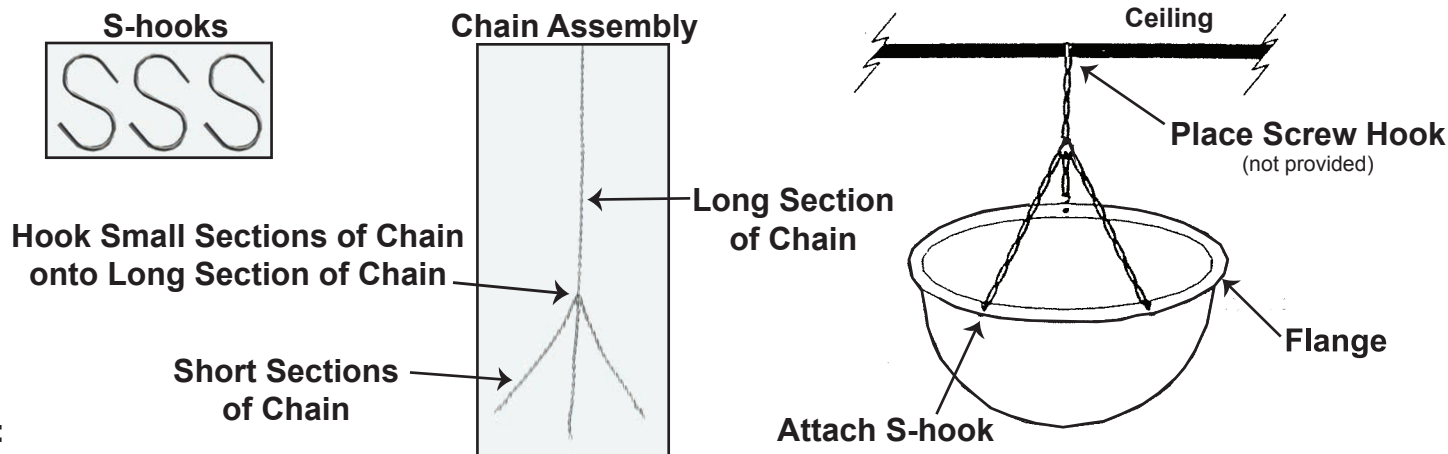

### Cleaning:

Dome mirrors may be cleaned with a soft cloth dampened with water.

Applying Pledge® Spray wax to the surface and wiping with a clean, soft cloth once or twice a year is recommended to reduce static and keep the mirror's high gloss finish.

Scratches can be removed by applying Novus® Plastic Polish #2 or Turtle® Wax white polishing compound to the mirror.

**CAUTION - Never use ammonia type liquids or abrasive cleaning agents**

Part # 8162